MANUAL


INSTALLATION

The clock is intended for wall mounting.

1. Unpack the clock. Make sure that no part is missing. The package consists of the following parts:

Board	1 pc
Synchronous movement 230V AC	1 pc
Minute hand	1 pc
Screws Phillips M4x12	4 pcs
Mounting brackets wall	4 pcs
Screws hexagon M6x16	4 pcs
Washers 10.5x22x2	4 pcs
Hexagon key	1 pc
Manual (this document)	1 pc

- 2. Mount the brackets on the clock inside. Use the enclosed hexagon screws and washers.
- 3. Place the clock on a suitable wall. Mark and drill the mounting holes.
- 4. The recommended electrical installation consists of an electric plug, a socket and a switch. All suitable for outdoor use. The clock is not equipped with any built-in mains switch. Note that the electrical installation has to be performed by qualified personnel only.

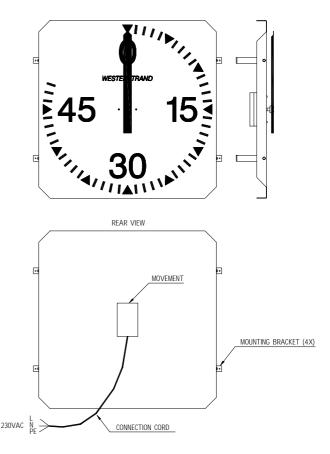

- 5. Mount the plug on the clock's connection cord. Note that the protective earth wire is green/yellow and make sure that it is properly connected in the plug.
- 6. Mount the clock on the wall with suitable screws (not enclosed).
- 7. Mount the minute hand by means of the enclosed hexagon key.
- 8. Connect the connection cord to the mains, 230 VAC 50 Hz.
- 9. Check that the clock is working.

OPERATION

Setting/resetting the clock.

Disconnect the clock from the mains, manually turn the minute-hand to the right position.

MAINTENANCE

The following is recommended for long and trouble-free operation:

- 1) The clock is taken down and stored indoors during the inactive part of the sports season.
- 2) Once or twice a year, applicate a few drops of thin oil on the minute hand shaft bearing.
- 3) Make sure that the oil is suitable for the temperatures occurring.

Tel : +46 (0)506 48000 Fax : +46 (0)506 48051 Internet: www.westerstrand.se